

HMF 4720-K




- power to lift.


HMF 4720-K

Grupo de carga B3		4720-K2	4720-K3	4720-K4	4720-K5	4720-K6	4720-K7	4720-K8
Momento de carga	tm	45,1	44,1	43,7	42,5	41,5	41,3	40,3
Alcance hidráulico	m	8,3	10,3	12,5	14,5	16,8	19,1	21,5
Momento de giro	kgm	5000	5000	5000	5000	5000	5000	5000
Ángulo de giro	°	cont.						
Altura sobre el chasis	mm	2398	2398	2398	2398	2398	2438	2438
Anchura, grúa plegada	mm	2519	2519	2519	2519	2519	2519	2519
Longitud de la base	mm	1198	1198	1198	1198	1198	1298	1298
Extensión de estabilizadoras est.	mm	5550	5550	5550	5550	5550	5550	5550
Extensión de estabilizadoras, corta	mm	7770	7770	7770	7770	7770	7770	7770
Peso	kg	3610	3900	4170	4420	4620	4800	4975
Peso de estabilizadores est.	kg	370	370	370	370	370	370	370
Presión de trabajo	MPa	35,0	35,0	35,0	35,0	35,0	35,0	35,0
Caudal de la bomba	l/min				80-110			
Capacidad del tanque, sep.	l				250			
Potencia absorbida	kW				47-65			
Altura de gancho a 1,5 m de la columna	m	2,9	2,8	2,7	2,7	2,6	2,6	2,5


HMF 4720-K7 + FJ600-K3

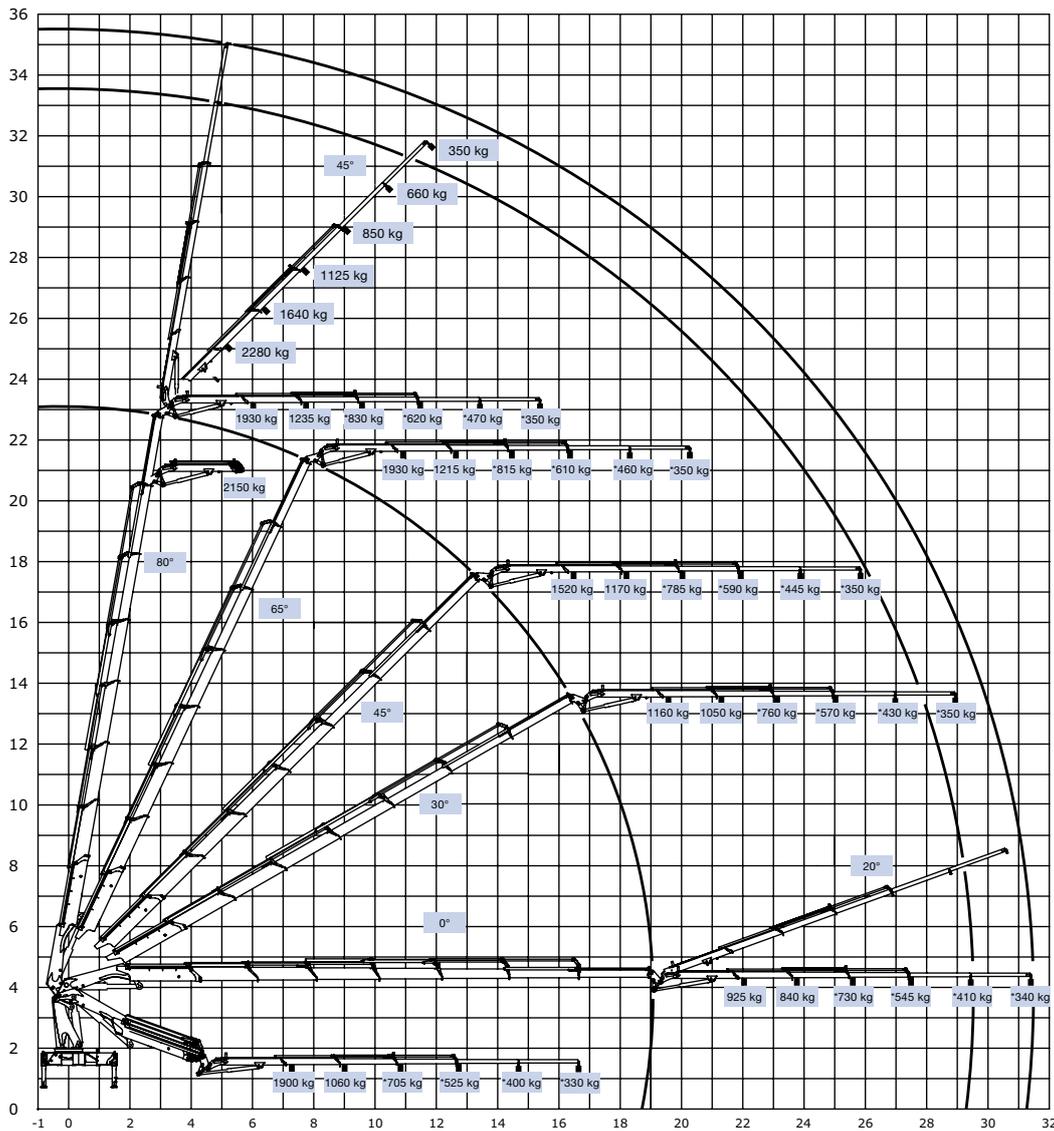


HMF 4720

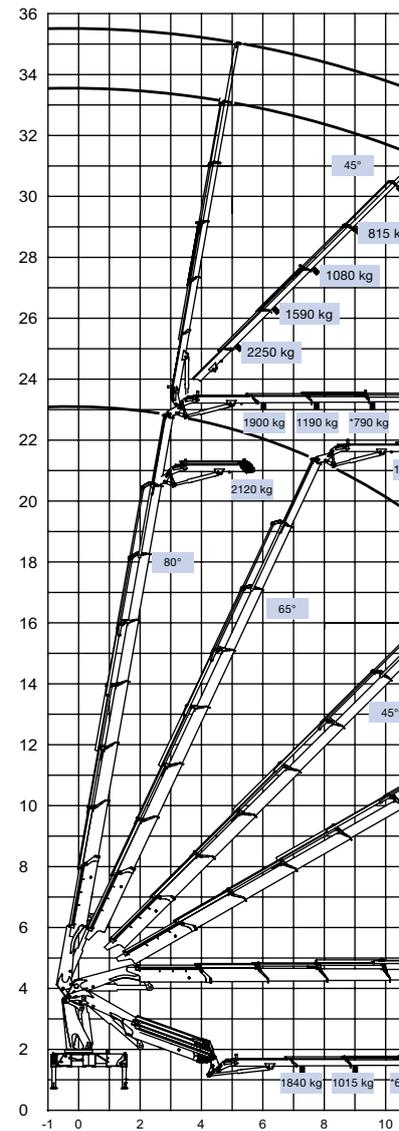




HMF 4720-K6

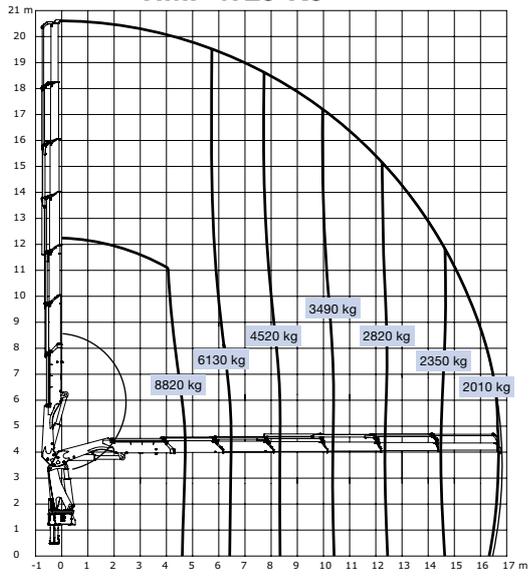


HMF 4720-K8

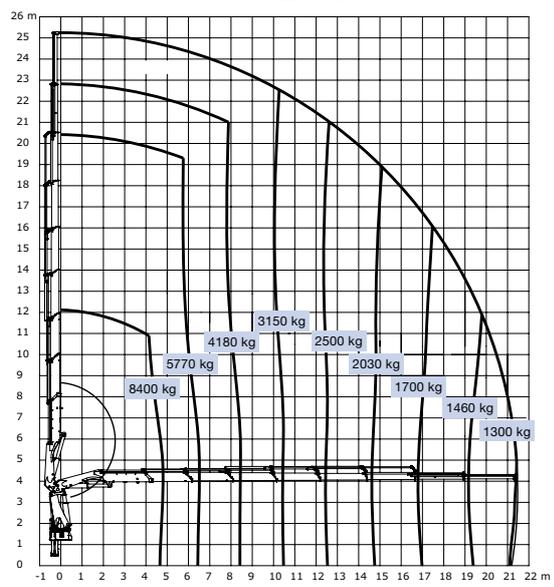


-K7 + FJ600-K4

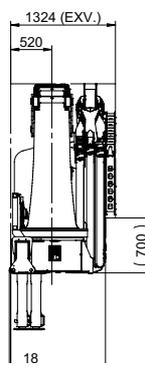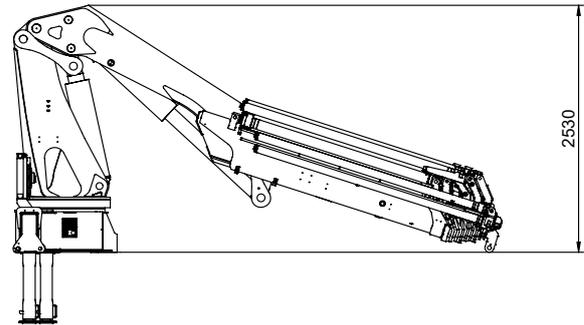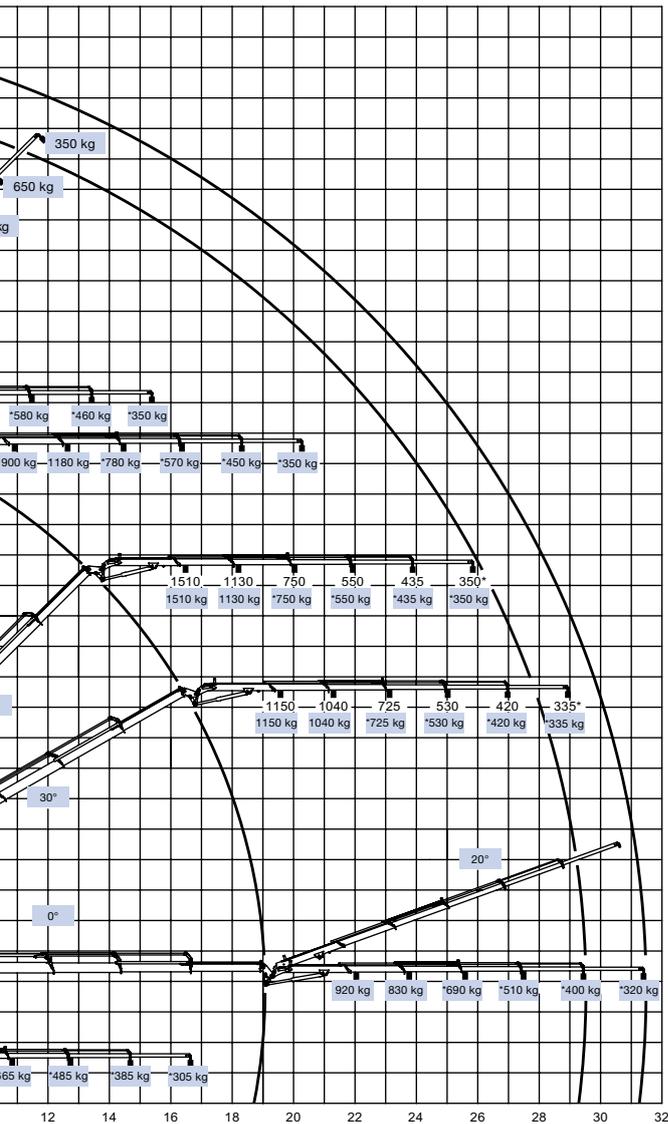

HMF 4720-K2 - K6

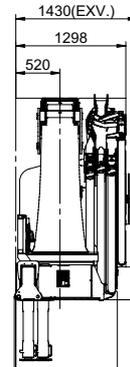

HMF 4720-K7 - K8

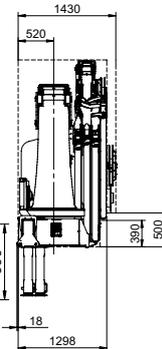


HMF 4720-K7 + FJ 600


HMF 4720-K




HMF 4720-K2

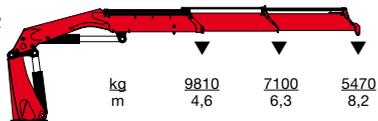


HMF 4720-K3

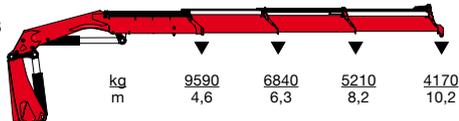


HMF 4720-K4

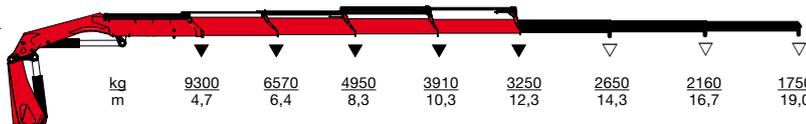


HMF 4720-K5

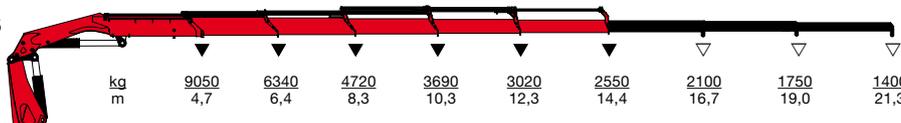


HMF 4720-K6

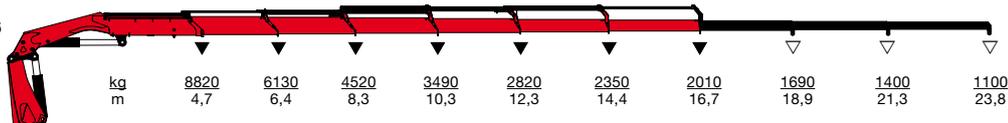

HMF 4720-K7

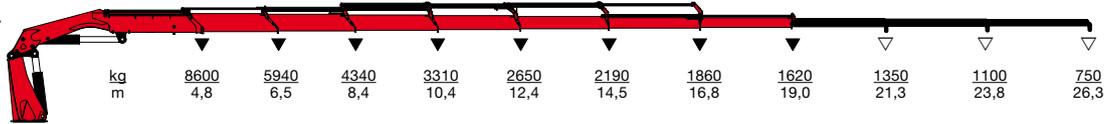

HMF 4720-K8



▼ El momento de carga se indica sin prolongas manuales
 ▽ El momento de carga se indica con prolongas manuales

Z008471-2

Nos reservamos el derecho de introducir modificaciones



Højbjerg Maskinfabrik A/S • Oddervej 200 • DK-8270 Højbjerg
 Tel.: +45 8627 0800 • Fax: +45 8627 0744 • info@hmf.dk

www.hmf.dk