

Pro-face
for the best interface

Operator Interface Plus Control

LT4000M SERIES

flexible




LT4000M Series

Display + Control Hybrid Model enables more flexible and space saving installations.



All-in-one Unit


All-in-one design makes it easy to keep equipment compact and allows installation in a $\phi 22$ mm hole for easy panel mounting.* Easily troubleshoot equipment by replacing the display unit or the control unit.

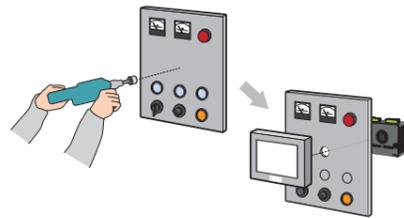

* The 22mm hole is the standard size used for buttons or lamps.

Flexible Installation

Use a separation cable* to install the control unit on a DIN rail and the operation unit in a different location. Operation unit is space-saving, and it allows you to install flexibly even where it is difficult to install due to limitations of space.

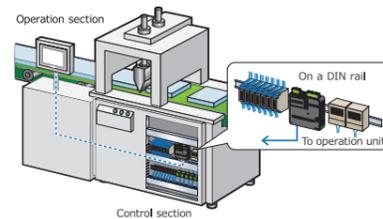

* 3m and 5m cables are available.


Compact Size

The crisp display let you create easy-to-read yet detailed operation screens. The integrated control functionality provides Digital I/O, Analog I/O, and Analog temperature inputs as well as USB, serial, and Ethernet communication ports.



CANopen Networking

The LT4000M provides data exchange with various remote devices via CANopen for an economical and user-friendly system design. Choose between standard I/O modules or more sophisticated products such as motion or control for complex applications.

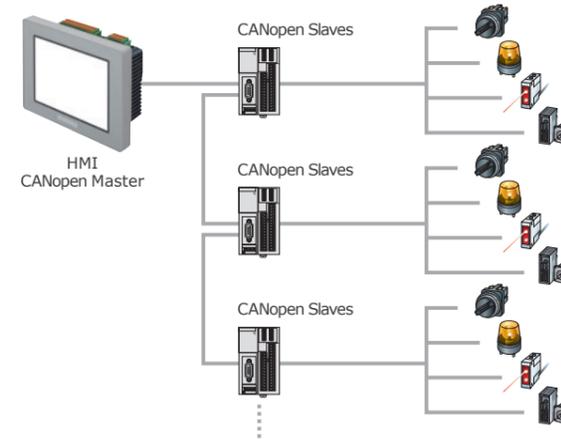

Pro-face Remote HMI

The natural link between the process and your tablet or smartphone. By adding the APP true mobile operation will be possible without loss of operability. Confirm the cause of an error directly with your mobile device and see if the machine can be put back into operation without going on site.*

Pro-face Remote HMI

Remote Monitoring Software for mobile



* Supported from beginning of 2014.


Lineup



Series	Product	Display				Interface					Controller								
		Display Size	Resolution	LCD	Color	Ethernet	Serial	CANopen (master)	USB (host)	USB (Device)	Built-in DIO Input	Built-in DIO Output	Built-in AIO Input	Built-in AIO Output	Special DIO		Expansion Unit		Controller Memory Size
LT4000M Series	LT-4301TM DIO model	5.7"	QVGA 320x240pixels	TFT	65,536	1	1 (RJ45)	1 (D-sub9)	1	1	20	10	—	—	2 High-speed Counter (with Synchronize Output) Pulse Catch Input	2 Pulse Output PWM Output	—	63 Nodes	FLASH EPROM 132KB Equivalent to 15,000 Steps (Up to 60,000 Steps)
	LT-4301TM Analog model										12	6	4	2					
	LT-4201TM DIO model	3.5"									20	10	—	—					
	LT-4201TM Analog model										12	6	4	2					
LT3000 Series	LT-3300T	5.7"	QVGA 320x240pixels	TFT	65,536	1	1 (D-sub9)	—	1	—	16	16	—	4 High-speed Counter (with Synchronize Output) Pulse Catch Input Pulse Output PWM Output	—	3 Units Max. Up to 48 IOs	63 Nodes	FLASH EPROM 132KB Equivalent to 15,000 Steps (Up to 60,000 Steps)	
	LT-3300L			Monochrome															16 Shades
	LT-3301L			Monochrome															8 Shades
	LT-3201A	3.8"		—															—

Connect to a wide range of control equipment

Pro-face HMIs support connection with a wide range of industrial controllers including PLCs, motion controllers, robots, and other devices.

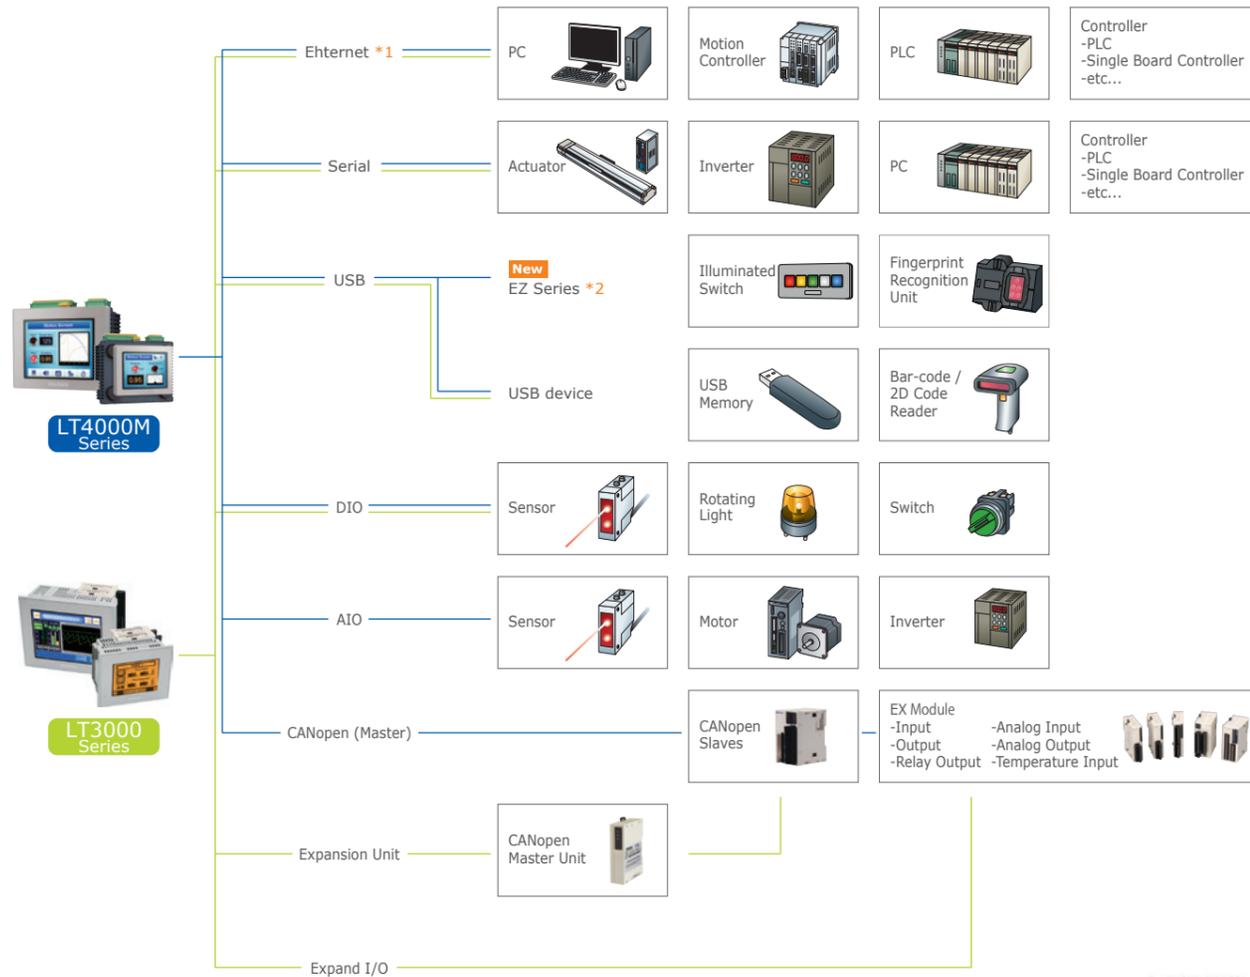


*1 Only for units with Ethernet.
*2 Only for LT4000M Series.

For further information, visit our website.
<http://www.pro-face.com/product/soft/gpproex/driver/driver.html>



Remote Monitoring

LT4000M Series LT3000 Series

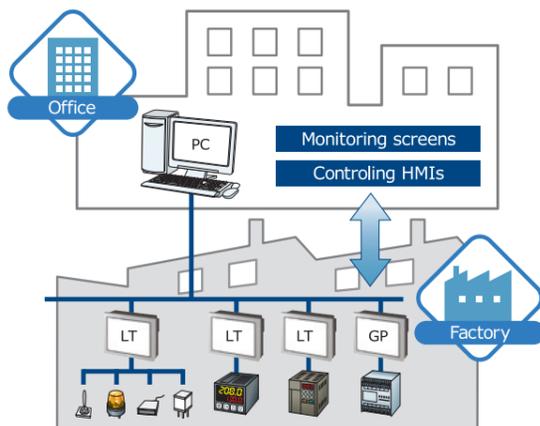

Use remote monitoring software, GP-Viewer* or data management software, Pro-Server EX* to easily monitor and control HMI screens on the production site, or distribute instruction data and collect real-time production data.

* Requires separate license.

GP-Pro EX



Improving development efficiency and maintaining technical know-how.

Screens and logic programs*1 can be edited with the same software*2, and the same addresses or user-defined control symbols can be shared for both screen parts and logic elements with drag-and-drop operation.

Controller addresses can be written directly to help reduce development time. Using the Function Block feature lets you reuse configured logic components and protect technical know-how via password protection.

*1 IEC 61131-3-compliant *2 LT4000M Series requires GP-Pro EX Ver.3.12 or later.

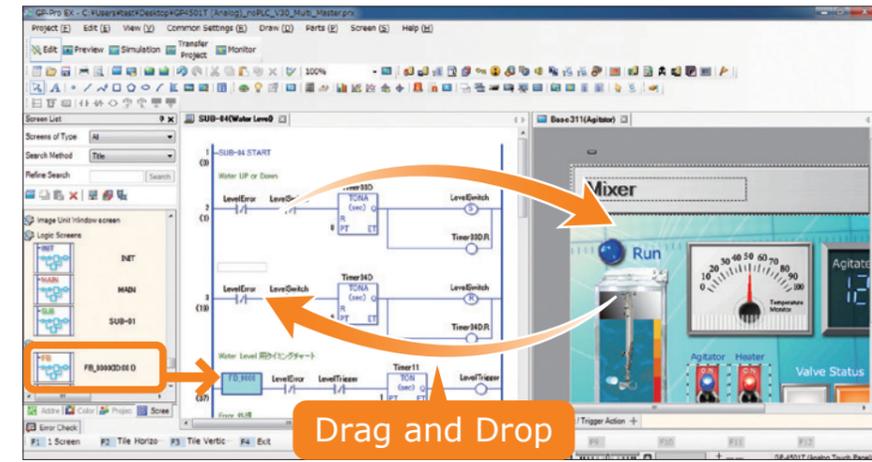



Image of Ladder Logic screen. Instruction List Logic screen also available.

Easily verify and debug projects with GP-Pro EX.


GP-Pro EX Simulation is an off-line simulation function which enables verification of screens, logic programs, and program operation without connecting to an HMI.



Logic Monitor function allows you to perform on-line logic program simulation on the HMI.

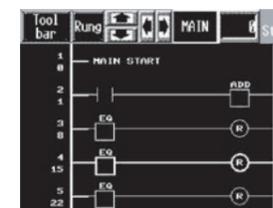

● Logic Monitor
Displays the whole ladder program. You can check the operation status and logic program.

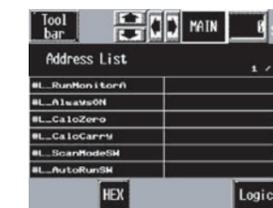

● Address Monitor
Displays addresses used in the ladder program. Displays variables and their current values.

For further information, visit our website.
<http://www.pro-face.com/product/soft/gpproex.html>



Product Specifications Summary

		LT4000M Series		LT3000 Series		
		LT-4301TM	LT-4201TM	LT-3300T	LT-3300L	LT-3201A
Display Type		TFT		Monochrome		Monochrome Amber/Red
Display Size		5.7"	3.5"	5.7"		3.8"
Resolution		320 x 240 pixels (QVGA)				
Display Colors		65,536 colors		Monochrome (16 Levels)		Monochrome (8 Levels)
Brightness Control		-		8 Levels (Adjusted with the touch panel)		
Touch Panel Type		Resistive Film (analog)				
Application Memory *1		FLASH EPROM 16 MB		FLASH EPROM 6 MB		
Data Backup		nvSRAM 128 KB *2		SRAM 128 KB *2		
Control Memory	Variable Area	nvSRAM 64 KB *2		SRAM 64 KB *2		
	Program Area	FLASH EPROM 132 KB				
	Number of Step *3	Equivalent to 15,000 steps				
Interface	Serial (COM1)	RS-232C/485, Asynchronous Transmission, Data Length: 7 or 8 bit, Parity: none, Even or Odd, Stop Bit: 1 or 2 bit, Data Transmission Speed: 2,400 bps to 115.2 kbps, Connector: RJ45		RS-232C/422/485, Asynchronous Transmission, Data Length: 7 or 8 bit, Parity: none, Even or Odd, Stop Bit: 1 or 2 bit, Data Transmission Speed: 2,400 bps to 115.2 kbps, Connector: D-Sub9 (plug)		-
	CANopen (Master)	CAN-CiA (ISO 11898-2:2002 part2), Connector: D-sub9 (plug)		-		
	Ethernet (LAN)	IEEE802.3/IEEE802.3u, 10BASE-T/100BASE-TX, Connector: Modular jack (RJ-45)		-		
	USB (TYPE-A)	Conforms to USB2.0 (TYPE-A) x 1, Power Supply Voltage: DC 5 V ±5 %, Output Current: 500 mA or less, Communication Distance: 5 m (16.4 ft) or less		Conforms to USB1.1 (TYPE-A) x 1, Power Supply Voltage: DC 5 V ±5 %, Output Current: 500 mA or less, Communication Distance: 5 m (16.4 ft) or less		
	USB (mini B)	USB Mini B V2.0		-		
Number of connecting devices		4		1		
Built-in DIO	Input	20 or 12 *4		16		12
	Output	10 or 6 *4		16		6
Special DIO *5 (Shared Use)	Input	100KHz Max. High-speed Counter (with Synchronize Output), Pulse Catch Input				
	Output	-		65KHz Max. Pulse Output, 65KHz Max. PWM Output *9		
Special DIO *6 (Exclusive Use)	Output	50KHz Max. Pulse Output, 65KHz Max. PWM Output		-		
	Input *7	0 or 2 *4		-		
Built-in AIO	Temperature Input *8	0 or 2 *4		-		
	Output *7	0 or 2 *4		-		
EX Module interface *10		-		1 *11		1 *11
AUX / Expansion Unit *10		-		1		
Rated Input Voltage		DC24V				

*1 Capacity available for user application. *2 Rechargeable lithium battery for data back up. *3 Up to 60,000 steps can be converted in software. However, this reduces internal memory capacity (for screen data) by 1 MB. *4 The number of Built-in digital and analog I/Os differs between DIO type and Analog type. *5 Uses built-in DIO's points. *6 When using Pulse Output and PWM Output on LT4000M, External I/O and a LT unit must share the same power supply. *7 Various voltage and current input ranges are supported. *8 RTD: PT100, PT1000, NI100 and NI1000. Thermocouple: J, K, R, B, S, T, E and N. *9 For pulse outputs, when combining the number of CH and high-speed counters used, there is a limit to the maximum output frequency in the LT3000 Series. For details, please refer to GP-Pro EX Reference Manual. *10 EX Module and Communication Expansion Unit cannot be used at the same time. *11 Up to three (LT-330xx) or two (LT-3201A) EX modules can be connected.

External Dimensions / Panel Cut-Out

LT-4301TM

[External Dimensions/Interfaces] Unit: mm [in.]

[Panel Cut-Out] Unit: mm [in.]

A	B	C	D
1.5 to 6 [0.06 to 0.23]	4.00 [0.15]	22.50 [0.88]	30.00 [1.18]

*If rotating torque acted on a display module is 2.5 N.m (22.12 in-lb) or more, use an anti-rotation tee which is supplied with a LT unit. The anti-rotation tee supports up to 6 N.m (53.10 in-lb).

LT-4201TM

[External Dimensions/Interfaces] Unit: mm [in.]

[Panel Cut-Out] Unit: mm [in.]

A	B	C	D
1.5 to 6 [0.06 to 0.23]	4.00 [0.15]	22.50 [0.88]	30.00 [1.18]

*If rotating torque acted on a display module is 2.5 N.m (22.12 in-lb) or more, use an anti-rotation tee which is supplied with a LT unit. The anti-rotation tee supports up to 6 N.m (53.10 in-lb).

LT-3300T/L

[External Dimensions/Interfaces] Unit: mm [in.]

[Panel Cut-Out] Unit: mm [in.]

Allowable Panel Thickness: 1.6 [0.06] to 5.0 [0.20]

LT-3201A

[External Dimensions/Interfaces] Unit: mm [in.]

[Panel Cut-Out] Unit: mm [in.]

Allowable Panel Thickness: 1.6 [0.06] to 5.0 [0.20]

! LT-3301L does not support Ethernet Interface. The maximum thickness when three EX modules are connected: 123.0mm [4.84in.].

! The maximum thickness when two EX modules are connected: 96.8 mm [3.81 in.].

Options

Software

*** is changed with the version of software.

Product Name	Global Code	Description	LT-4301TM	LT-4201TM	LT-3300XX	LT-3201A
GP-Pro EX	PFXEXEDV**	HMI screen editor & logic programming software *1	○	○	○	○
GP-Pro EX Group License	PFXEXGRPLS****	GP-Pro EX Editor Group License *1 *2	○	○	○	○
GP-Pro EX Editor License	PFXEXEDLSV**	GP-Pro EX editor license *3 *4	○	○	○	○
GP-Viewer EX	1 licence	License allowing a PC to access a LT in remote mode. *4	○	○	○	-
	10 licence		○	○	○	-
	30 licence		○	○	○	-
Pro-Server EX Developer	PFXEXSDV**	Software that connects a PC to a LT via Ethernet and collects and transmits data *4 *5	○	○	○	-
Pro-Server EX Developer License	PFXEXSDL	Pro-Server EX developer license *4 *6	○	○	○	-
Pro-Server EX Runtime License	PFXEXSRLS	Pro-Server EX Runtime license *4 *7	○	○	○	-
MES Action License	PFXEXMSLSV**	License key permitting Pro-Server EX to access a database	○	○	○	-

*1 LT4000M Series requires GP-Pro EX Ver.3.12 or later. *2 Group License consists of one set of Serial No./Key Code for installation. (Should be used in the same office. Only supports GP-Pro EX Ver.3.1 or later.) *3 Purchase this product when installing GP-Pro EX in a second or subsequent PC. One license is required for each PC. *4 Only for units with Ethernet. *5 Includes the settings editor and Run time. *6 Purchase this product when installing the settings editor and Run time in subsequent PCs. *7 Purchase this license when installing only Run time in subsequent PCs. One license is required for each PC.

I/O Units (EX Module / CANopen unit)

Product Name	Global Code	Description	LT-4301TM	LT-4201TM	LT-3300XX	LT-3201A
8-Point Input Module	PFXZLUEUDDI8DT	8-point sink-source shared expansion unit *8	○	○	○	○
8-Point Relay Output Module	PFXZLUEUDRA8RT	8-point relay output / 2-point common type expansion unit *8	○	○	○	○
8-Point Sink Output Module	PFXZLUEUDDO8UT	8-point transistor output sink type expansion unit *8	○	○	○	○
8-Point Source Output Module	PFXZLUEUDDO8TT	8-point transistor output source type expansion unit *8	○	○	○	○
16-Point Input Module	PFXZLUEUDDI16DT	16-point sink-source shared expansion unit *8	○	○	○	○
16-Point Relay Output Module	PFXZLUEUDRA16RT	16-point relay output / 2-point common type expansion unit *8	○	○	○	○
16-Point Sink Output Module	PFXZLUEUDDO16UK	16-point transistor output sink type expansion unit *8	○	○	○	○
16-Point Source Output Module	PFXZLUEUDDO16TK	16-point transistor output source type expansion unit *8	○	○	○	○
4-Point Input / 4-Point Relay Output Module	PFXZLUEUDDMM8DRT	4-point input sink-source / 4-point relay output / 1 common mixed I/O unit *8	○	○	○	○
2-ch Analog Input Module	PFXZLUEUAMI2HT	2-ch analog input type expansion unit *8	○	○	○	○
Thermocouple (Pt100 Input) / 1-ch Analog Output Module	PFXZLUEUALM3LT	2-ch temperature input / 1-ch analog output type expansion unit *8	○	○	○	○
2-ch Analog Input / 1-ch Analog Output Module	PFXZLUEUAMM3HT	2-ch analog input / 1-ch analog output expansion unit *8	○	○	○	○
1-ch Analog Output Module	PFXZLUEUAMO1HT	1-ch analog output type expansion unit *8	○	○	○	○
4-ch Voltage, Current, Pt100 / Pt1000 / Ni100 / Ni1000 Input Module	PFXZLUEUAMI4LT	4-ch Analog Input / Temperature Input Expansion Unit *8	○	○	○	○
2-ch Analog Output Module	PFXZLUEUAVO2HT	2-ch Analog output Expansion Unit *8	○	○	○	○
4-ch Analog Input / 2-ch Analog Output Module	PFXZLUEUAMM6HT	4-ch Analog Input / 2-ch Analog Output Expansion Unit *8	○	○	○	○
8-ch Temperature Pt100 / Pt1000 Input Module	PFXZLUEUAR18LT	8-ch Temperature Input Expansion Unit *8	○	○	○	○
16-point Input / 8-point Relay Output Module	PFXZLUEUDDMM24DRF	16-point Input Sink-Source / 8-Point Relay Output Expansion Unit *8	○	○	○	○
CANopen Master Unit	PFXZC8EUCA1	Master unit to connect to a slave unit supporting CANopen	-	-	○	○
CANopen Slave HTB Unit	PFXHTB1C0DM9LP	Slave unit supporting CANopen with 12 digital inputs, 6 relay outputs and 2 transistor source outputs. Up to 7 units of EX modules can be connected. *8	○	○	○	○

*8 LT4000M Series requires GP-Pro EX Ver.3.50 or later.

Cable, Adapter, and other options.

Product Name	Global Code	Description	LT-4301TM	LT-4201TM	LT-3300XX	LT-3201A
USB Transfer Cable (2m)	PFXZC3CBUSA1	USB cable for transferring data such as screen data (host to host)	○	○	○	○
USB Transfer Cable (USB Type A/mini B)(1.8 m)	PFXZC9USCBMB1	Cable for transferring screen data from a PC (USB Type A) to the GP unit (USB mini B).	○	○	-	-
USB Panel-mount Extension Cable (USB mini B)(1m)	PFXZC9USEXMB1	Extension cable attaching to the USB (mini B) interface on the front side of the operation panel.	○	○	-	-
USB Cable (5m)	PFXZC0CBUS1	Connects a USB peripheral unit. (host to slave)The cable for extending the LT's USB port	○	○	○	○
USB Front Cable (1m)	PFXZC5CBUBEX1	The conversion cable for using a LT's USB I/F as the Serial (RS-232C) I/F. Connects a Modem only for the RS-232C communication method.	○	○	○	○
USB-Serial (RS-232C) Conversion Cable (50cm)	PFXZC6CBVUSR21	Interface cable for communication between a temperature controller/ various boards and the LT series via RS-232C.	-	-	○	○
RS-232C Cable (5m)	PFXZC3CBR251	Interface cable for communication between a temperature controller/ various boards and the LT series via RS-232C.	-	-	○	○
RJ45 RS-232C Cable (5m)	PFXZLMCBRJR21	Cable with loose wires at one end for RS-232C connection between various hosts and the LT.	○	○	-	-
RJ45 RS-485 Cable (5m)	PFXZLMCBRJR81	Cable with loose wires at one end for RS-485 connection between various hosts and the LT.	○	○	-	-
RS-422 Cable (5m)	PFXZC3CBR452	Interface cable for communication between a temperature controller/ various boards and the LT series via RS-422.	-	-	○	○
RS-422 Cable (5m)	PFXZC3CBR451	Interface cable for communication between a temperature controller/ various boards and the LT series via RS-422. <for a unit of terminal resistance 100>	-	-	○	○
Display module/Rear module separation cable (3m)	PFXZXMADSM31	Cable with hook to install a rear module on a DIN rail while connecting the rear module to a separated display module	○	○	-	-
Display module/Rear module separation cable (5m)	PFXZXMADSM51	Cable with hook to install a rear module on a DIN rail while connecting the rear module to a separated display module	○	○	-	-
EZ Illuminated Switch	PFXZCCEUSG1	A unit of 5 illuminated switches with multiple color LED easily connected with HMI via USB	○	○	-	-
EZ Fingerprint Recognition Unit	PFXZCCEUSS1	Fingerprint recognition unit easily connected with HMI via USB *9	○	○	-	-
COM port adapter	PFXZC3ADCM	Pin assign conversion adapter connects optional RS-422 communication items to LT series unit's COM1 port.	-	-	○	○
Terminal block conversion adapter	PFXZC3ADR41	Conversion adapter converts a COM port to RS-422 terminal block.	-	-	○	○
RS-232C Isolation Unit	PFXZC3ADISR21	Unit for providing isolated connection between a temperature controller/ various boards and the LT series. RS-232C and RS-422 are switchable.	-	-	○	○
Screen Protection Sheet	PFXZC3DS61	Disposable, dirt-resistant sheet for the LT unit's screen (5 pcs/set)	-	-	○	○
Environmentally-resistant Cover	PFXZC6DS41	Disposable, dirt-resistant sheet for the LT unit's screen (5 pcs/set)	-	-	○	○
Panel Cutout Adapter	PFXZC4AT61	Attachment required for installing a 5.7-inch display unit in the mounting hole of LT Series (GLC150).	-	-	○	○

*9 EZ Fingerprint Recognition Unit involves fingerprint technology. In some jurisdictions, this product may be subject to notification to and/or approval by relevant local regulatory authority prior to importing this product into such jurisdictions and/or using this product in such jurisdictions. The jurisdictions which do not require such notification and/or approval as of December 1,2012 ("Non-regulated Jurisdictions") are as follows: Japan, Taiwan, USA, Canada, Mexico, Brazil, Australia and Singapore.

Maintenance Options

For list of the maintenance options, if a product is damaged or lost, please visit our website.

For further information, visit our website.

http://www.pro-face.com/product/hmi/lt4000m/option/option_other.html



Control Instruction List

Basic Instruction

■ Bit Basic	
Normally Open	NO
Normally Closed	NC
Coil (Out)	OUT
Negative out	OUTN
Set	SET
Reset	RST

■ Pulse Basic	
Positive Transition	PT
Negative Transition	NT

■ Program Control	
Function Block	FB
Jump	JMP <P>
Jump to Subroutine	JSR <P>
Return	RET
Repeat Number of Times (FOR)	FOR
Repeat Number of Times (NEXT)	NEXT
Inverse	INV
Exit	EXIT
Power Bar Control	PBC
Power Bar Reset	PBR
Logic Wait Instruction	LWA

Timer Instruction

On Delay Timer	TON
Off Delay Timer	TOF
Pulse Timer	TP
Accumulated On Delay Timer	TONA
Accumulated Off Delay Timer	TOFA

Counter Instruction

Up Counter	CTU <P>
Down Counter	CTD <P>
Up/Down Counter	CTUD <P>

Read / Write Instruction

■ Time Read/Write	
Time Read	JRD <P>
Time Set	JSET <P>
■ Date Read/Write	
Date Read	NRD <P>
Date Set	NSET <P>

Operation Instruction

■ Arithmetic Operation	
Add	ADD <P>
Subtract	SUB <P>
Multiplication	MUL <P>
Division	DIV <P>
Modulation	MOD <P>
Increment	INC <P>
Decrement	DEC <P>

■ Time Operation	
Time Addition	JADD <P>
Time Subtraction	JSUB <P>

■ Logical Operation	
Logical AND	AND <P>
Logical OR	OR <P>
Logical XOR	XOR <P>
Logical NOT	NOT <P>

■ Transfer	
Move (Copy)	MOV <P>
Block Move (Block Copy)	BLMV <P>
Full Move (Full Copy)	FLMV <P>
Exchange	XCH <P>

Operation Instruction

■ Rotation	
Rotate Left	ROL <P>
Rotate Right	ROR <P>
Rotate Left with Carry Over	RCL <P>
Rotate Right with Carry Over	RCR <P>

■ Shift	
Shift Left	SHL <P>
Shift Right	SHR <P>
Arithmetic Shift Left	SAL <P>
Arithmetic Shift Right	SAR <P>

Function Instruction

■ Calculation Function	
Sum	SUM <P>
Average	AVE <P>
Square Root	SQRT <P>
Bit Count	BCNT <P>
PID	PID

■ Trigonometric Function	
Sine	SIN <P>
Cosine	COS <P>
Tangent	TAN <P>
Arc Sine	ASIN <P>
Arc Cosine	ACOS <P>
Arc Tangent	ATAN <P>
Cotangent	COT <P>

■ Other Functions	
Exponential	EXP <P>
Logarithm	LN <P>
Log Base 10	LG10 <P>

Compare Instruction

■ Arithmetic Compare	
Equal (=)	EQ
Greater Than (>)	GT
Greater Than or Equal To (\geq)	GE
Less Than (<)	LT
Less Than or Equal To (\leq)	LE
Not Equal (\neq)	NE

■ Time Compare	
Time Compare (=)	JEQ
Time Compare (>)	JGT
Time Compare (\geq)	JGE
Time Compare (<)	JLT
Time Compare (\leq)	JLE
Time Compare (\neq)	JNE

■ Date Compare	
Date Compare (=)	NEQ
Date Compare (>)	NGT
Date Compare (\geq)	NGE
Date Compare (<)	NLT
Date Compare (\leq)	NLE
Date Compare (\neq)	NNE

Convert Instruction

■ Data Convert	
BCD Convert	BCD <P>
BIN Convert	BIN <P>
Encode	ENCO <P>
Decode	DECO <P>
Convert to Radians	RAD <P>
Convert to Degrees	DEG <P>
Scale	SCL <P>

Convert Instruction

■ Type Convert	
Convert Integer to Float	12F <P>
Convert Integer to Real	12R <P>
Convert Float to Integer	F21 <P>
Convert Float to Real	F2R <P>
Convert Real to Integer	R21 <P>
Convert Real to Float	R2F <P>
Convert Seconds	H2S <P>
Convert Seconds to Time	S2H <P>

Instruction for I/O Driver

■ STD Driver	
Change Pulse Output Parameter	PLSX
Change Acceleration/Deceleration Pulse Output Parameter	PLSY
Read Pulse Output Parameter	PLSG
Start Pulse Output	PLS
Stop Pulse Output	PLSQ
Change PWM Output Parameter	PWMX
Read PWM Output Parameter	PWMG
Start PWM Output	PWM
Stop PWM Output	PWMQ
Change High Speed Counter Parameter	HSCX
Read High Speed Counter Parameter	HSCG
Start High Speed Counter	HSC
Stop High Speed Counter	HSCQ
Confirm Pulse Catch Input	PCH
Clear Pulse Catch Input	PCHQ

Instructions with <P> correspond to positive transition instructions (differential transition). By adding P to the end of each instruction notation (LMP, etc.), you can use the instruction as a positive transition instruction (e.g., JMPP, JSRP, etc.).

⚠ WARNING

HAZARD OF OPERATOR INJURY, OR UNINTENDED EQUIPMENT DAMAGE

Before operating any of these products, be sure to read all related manuals thoroughly.

Failure to follow these instructions can result in death or serious injury, unintended equipment damage.

For printing purposes, the colors in this catalog may differ from those of the actual unit.

Actual user screens may differ from the screens shown here.

Electric equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Digital for any consequences arising out of the use of this material.

- All product names used in this catalog are the registered trademarks or trademarks of their respective companies.
- All information contained in this catalog is subject to change without notice.

Global Headquarters Digital Electronics Corporation Osaka, JAPAN Tel: +81 (0)6 6613 1101 Fax: +81 (0)6 6613 5888 www.pro-face.com info@pro-face.com	North America Pro-face America, Inc. Ann Arbor, MI U.S.A. Tel: +1 734 477 0600 Fax: +1 734 864 7347 www.profaceamerica.com info@profaceamerica.com	Taiwan Pro-face Taiwan Co., Ltd. Taipei, TAIWAN Tel: +886 (0)2 2657 1121 Fax: +886 (0)2 2657 1021 www.proface.com.tw proface@proface.com.tw	European Headquarters Pro-face Europe B.V. Hoofddorp, THE NETHERLANDS Tel: +31 (0)23 55 44 099 Fax: +31 (0)23 55 44 090 www.proface.eu info@proface.eu	Italy Pro-face Italia S.p.a. Bovisio Masciago (Milano), ITALY Tel: +39 (0)362 59 96 1 Fax: +39 (0)362 59 96 9 www.proface.it info@proface.it	Spain and Portugal Pro-face España Cardedeu (Barcelona), SPAIN Tel: +34 (0)93 846 07 45 Fax: +34 (0)93 845 48 68 www.proface.es info@proface.es
Australia and New Zealand Pro-face Australia Mt. Waverley, AUSTRALIA Tel: +61 (0)3 9550 7396 Fax: +61 (0)3 9550 7390 www.pro-face.com.au www.pro-face.co.nz pfau@pro-face.com	Singapore Pro-face Singapore TechPoint, Singapore Tel: +65-6832-5533 Fax: +65-6415-1605 www.proface.sg info@proface.sg		Austria Pro-face Europe B.V. (Austria Office) Hagenberg, AUSTRIA Tel: +43 7236 3343 620 Fax: +43 7236 3343 629 www.proface.at info@proface.at	Denmark Pro-face Northern Europe ApS Roskilde, DENMARK Tel: +45 70 22 01 22 Fax: +45 70 22 01 33 www.proface.dk info@proface.dk	Sweden Pro-face Sweden AB Löddeköpinge (Malmö), SWEDEN Tel: +46 46 540 90 70 Fax: +46 46 71 27 90 www.proface.se info@proface.se
China Pro-face China International Trading Co., Ltd. Shanghai, P. R. CHINA Tel: +86 (0)21 6361 5175 Fax: +86 (0)21 6361 5176 www.proface.com.cn proface@proface.com.cn	South-East Asia Pacific Pro-face South-East Asia Pacific Co., Ltd. Bangkok, THAILAND Tel: +66 (0)2 617 5678 Fax: +66 (0)2 617 5688 www.proface.com.th pfsales@proface.co.th		France Pro-face France S.A.S. Mity-Mory, FRANCE Tel: +33 (0)1 60 21 22 91 Fax: +33 (0)1 60 21 22 92 www.proface.fr info@proface.fr	Poland Pro-face Europe B.V. (Warsaw Office) Warszawa, POLAND Tel: +48 (22) 465 66 62 Fax: +48 (22) 465 66 67 www.proface.pl info@proface.pl	Switzerland Pro-face Schweiz GmbH Regensdorf, SWITZERLAND Tel: +41 (0)43 343 7272 Fax: +41 (0)43 343 7279 www.proface.ch info@proface.ch
India Pro-face India Bangalore, INDIA Tel: +91 80 4333 3540/3541 Fax: +91 80 4333 3222 www.proface.co.in sales.proface@proface.co.in	South Korea Pro-face Korea Co., Ltd. Seoul, SOUTH KOREA Tel: +82 (0)2 2630 9850 Fax: +82 (0)2 2630 9860 www.proface.co.kr proface@proface.co.kr		Germany Pro-face Deutschland GmbH Solingen, GERMANY Tel: +49 (0)212 258 260 Fax: +49 (0)212 258 2640 www.proface.de info@proface.de	Russia Pro-face Europe B.V. (Russia Office) Saint-Petersburg, RUSSIA Tel: +7 (812) 336 47 06 Fax: +7 (812) 336 47 18 www.pro-face.ru info@pro-face.ru	United Kingdom Pro-face UK Ltd Coventry, ENGLAND Tel: +44 (0)2476 511288 Fax: +44 (0)2476 511499 www.proface.co.uk info@proface.co.uk