





BOLEXP NORMALIZADOS, S.L.U.

Calle Barcelona 45 · E-08120 LA LLAGOSTA - Spain
Telf: +34 93 560 70 11 · Fax: +34 93 574 10 39
www.bolexp.com · bolexp@bolexp.com

BOLEXP NORMALIZADOS, S.L.U. reserves the right to make any modification, whether total or partial, without prior notice

BOLEXP CATALOGUE INDEX

BALL GUIDANCE	
Technical information Products Stainless steel FreeLUB	5 8 13 14
MOULD CENTERER	
Technical information Products Mould centerer ball guidance	16 17 18
INCLINED ASSEMBLY	
Technical information	19 20
SELF-LUBRICATED BRONZE	
Technical information Products Strip guides and plates	23

BOLEXP, guidance systems

This catalogue shows several guidance systems designed to provide with efficient service and useful solutions to the problems which arise when executing injection moulds and dies, as well as when executing machinery tools and construction in general.


All of the products in the present catalogue are available in stock for immediate delivery in order to offer a better service to meet our customer needs.



Bolexp Ball Guidance is a high-precision rolling system with very reduced travel resistance. It is advisable for rectilinear guides where wide travels, tiny friction, high-precision guidance and positioning, together with reduced wear and long durability, are required. Page 5.

The centerer for moulds guarantees the appropriate alignment for the main plates in the mould. The system of fixing to plate allows to apply machinery to plates in only one operation.

It includes graphite components for self-lubricating pieces and a TiN treatment for reducing seizing. For details, see page 16.

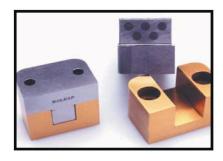



The tilted assembly allows to make the allocations of tilted columns with great agility. The fact of fixing it through the front side of the plate allows for an agile capacity of exchange. 140 models are available in stock, with 7 different degrees and 5 column diameters. For details, see page 19.

Bolexp Self-lubricated Guidance is a travel system which adds-in solid lubricant for its operating, needing little maintenance and exhibiting high resistance in elevated-temperature operating conditions and drastic seizing reduction. For details, see page 22.






BALL GUIDANCE

PRODUCT DESCRIPTION

BALL GUIDE BUSH

BOLEXP ball guidance bushes are made up of an outer casing of steel for rolling, hardened and ground, which holds fixed inside a high-resistance bronze cage for guiding the balls running along the cage. The translation system consists of several rows of precision balls circulating endlessly.

The great novelty of BOLEXP ball guidance bushes is that balls do not run aligned, with the translation motion, but at a slight angle, thus enlarging the contact area with the shaft and enabling greater load capacity. This patented system represents an utter innovation in the linear guidance market. An all-metal structure makes bushes extremely resistant to high temperatures. BOLEXP bushes are supplied in a variety of three outer forms, all of them equipped with the same inside structure.

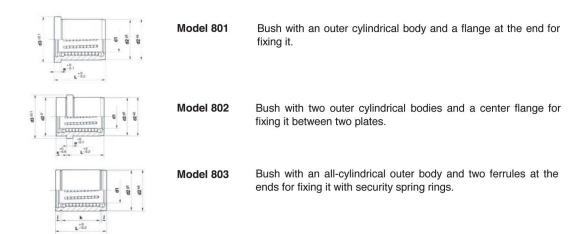

GUIDE COLUMN

BOLEXP guide column is made of steel 1.5732 with surface hardening, obtaining a hardness of 62-64 RHc, and a depth from 1.00 to 1.20 mm., leaving the shaft core soft so that it can absorb the bending it might be required to. In guide manufacturing, some features are considered to be essential, including the quality of steel, surface hardness and precision and quality of the finish.

FEATURES

Determining the adequate ball bush size is based on the requirements of the tool to be constructed and the load capacity needed, as well as bush lifetime and operating security.

Use the maximum recommended loads listed in Table I below for calculations.

			TAE	ILE I		
Catalunya)	MODEL	Maximum Recommended Load (N)	MODEL	Maximum Recommended Load (N)	MODEL	Maximum Recommended Load (N)
de	B8012035	1,250	B8022026	1,250	B8031630	882
Generalitat	B8012535	1,250	B8022035	1,915	B8031635	1,250
(Gen	B8012545	1,985	B8022526	1,250	B8032035	1,250
3.A.I.	B8012555	2,721	B8022535	1,985	B8032045	1,912
oy L.G	B8013245	1,691	B8022545	2,721	B8032535	1,250
port	B8013263	3,015	B8022555	3,456	B8032545	1,985
with re	B8014045	1,691	B8023245	2,574	B8032555	2,721
	B8014063	3,015	B8023263	3,897	B8033245	1,691
cordance	B8021222	882	B8024045	2,574	B8033263	3,015
e in ac	B8021622	882	B8024063	3,897	B8035045	1,691
Made	B8021626	1,250	B8031230	882	B8034063	3,015

Use the following formula to calculate nominal life for ball bushes.

Lh = (833/H*Nosc)*(C/P) in hours

Lh= Nominal lifetime in operating hours

H= Single-way length of oscillatory motion travel in m.

Nosc= Come-and-go motion frequence in 1/min.

C= Load capacity in N.

P= Equivalent rolling load in N.

Calculation example:

An injection mould expulsion is guided by four bushes reference B8022535 (C=1,985). The load on each bush is of P=200N, the column travel is of H=0.25 m., the come-and-go motion frequence is of Nosc=10 1/min. Nominal lifetime has to be calculated.

Solution: Lh= (833/0.25*10)*(1,985/200) = 300,000 hours

Load capacities and lifetime calculations for bushes shown here above are applicable under precisely defined conditions. Any adverse condition may reduce significantly both measurements.

TRAVEL ACCURACY

Travel accuracy with a guidance system using shafts with BOLEXP ball linear rolling depends on several factors, such as the positioning precision of bushes or shafts, quality of shafts, free length between shaft supports and length of the bush in relation to the area to be slid. These influences depend basically on the type of application and the load to be supported.

On the whole, the required travel accuracy must be ensured by the features and design of the assembly, as well as by the precise manufacture of adjacent pieces.

Fixing the shaft at its two ends is recommended, particularly in the case of high loads, whenever the project allows it.

LUBRICATION

In order to ensure long durability for BOLEXP ball bushes, proper lubrication and maintenance are a must. The channels that the balls run along must be free of any interfering particles. Moreover, it is recommended to use oil lubrication so as to ensure proper lubrication for the whole of rolling items and, if necessary, to remove all impurities.

We suggest the use of CLP oils according to DIN 51524, within the range of viscosities from ISO VG 64 to 100. Although grease can also be used for lubrication, this is not highly recommended as it fixes dirt particles much more easily.

BOLEXP ball bushes are supplied oiled for its conservation and must be lubricated when necessary. The conservancy fluid is compatible and can be mixed with mineral-based lubricants, making it unnecessary to wash bushes before assembling them.

SHAFT EXECUTION

Shafts for BOLEXP ball bushes must be hardened and ground. The ends require a tapering so that rollings cannot be damaged during the assembling. In order to fully benefit from high travel accuracy and load capacity of BOLEXP ball bushes, the shafts around which bushes slid must exhibit the best quality and a properly hard layer.

ASSEMBLING AND FIXING


BOLEXP ball bushes can be mounted either in holes with tolerance H7 or in such a way that they can be manually slid into their cartridge. Never hit them with hammers or any other impacting tool. Otherwise, the bush structure could be damaged.

It is recommended to mount at least two units in parallel disposal so as to avoid possible rotation motions in the travelling of items. Bush length is also suggested to be at least twice its diameter in order to minimize the rotation motion of balls, whenever this is possible.

Rotation motions are not advised in this type of bushes, whose function is that of translation.




BUSH REF. 801

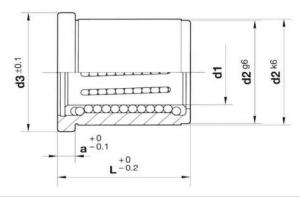

	BOLEXP 801												
d1	L	d2	d3	а	Ø ball	Number of lines	Item code						
20	35	32	36	6	3	6	B8012035						
25	35	40	45	6	3	8	B8012535						
25	45	40	45	6	3	8	B8012545						
25	55	40	45	6	3	8	B8012555						
32	45	50	56	8	4	8	B8013245						
32	63	50	56	8	4	8	B8013263						
40	45	60	66	8	4	8	B8014045						
40	63	60	66	8	4	8	B8014063						

Materials: Special steel bush. Bronze cage with high resistance to wear. High-precision balls. Hardness: 60-62 HRc.


BUSH REF. 802

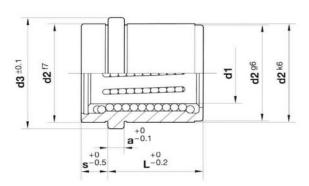

	BOLEXP 802												
d1	L	d2	d3	а	S	Ø ball	Number of lines	Item code					
8	12	18	21	3	6	2	5	B8020812					
10	12	20	24	4	9	2.5	5	B8021012					
12	22	24	28	6	8	3	5	B8021222					
16	22	28	32	6	8	3	6	B8021622					
16	26	28	32	6	9	3	6	B8021626					
20	26	32	36	6	9	3	6	B8022026					
20	35	32	36	6	9	3	6	B8022035					
25	26	40	45	6	9	3	8	B8022526					
25	35	40	45	6	10	3	8	B8022535					
25	45	40	45	6	10	3	8	B8022545					
25	55	40	45	6	10	3	8	B8022555					
32	45	50	56	8	12	4	8	B8023245					
32	63	50	56	8	12	4	8	B8023263					
40	45	60	66	8	12	4	8	B8024045					
40	63	60	66	8	12	4	8	B8024063					
50	55	70	76	10	25	4	10	B8025055					
60	55	85	91	10	25	4	12	B8026055					

Materials: Special steel bush. Bronze cage with high resistance to wear. High-precision balls. Hardness: 60-62 HRc.


BUSH REF. 803

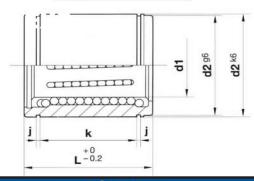

	BOLEXP 803												
d1	L	d2	k	j	Ø ball	Number of lines	Item code						
12	30	24	20	1,3	3	5	B8031230						
16	30	28	19	1,6	3	6	B8031630						
16	35	28	24	1,6	3	6	B8031635						
20	35	32	24	1,6	3	6	B8032035						
20	45	32	34	1,6	3	6	B8032045						
25	35	40	23	1,8	3	8	B8032535						
25	45	40	33	1,8	3	8	B8032545						
25	55	40	43	1,8	3	8	B8032555						
32	45	50	33	2,1	4	8	B8033245						
32	63	50	51	2,1	4	8	B8033263						
40	45	60	33	2,1	4	8	B8034045						
40	63	60	51	2,1	4	8	B8034063						
50	63	70	50	2,6	4	10	B8035063						
50	80	70	65	2,6	4	10	B8035080						
60	80	85	65	3,1	4	12	B8036080						
60	100	85	85	3,1	4	12	B80360100						

Materials: Special steel bush. Bronze cage with high resistance to wear. High-precision balls. Hardness: 60-62 HRc.


COLUMN REF. 808

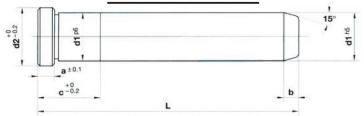

			BOL	.EXP	808	
d1	L	d2	а	b	С	Item code
8	60	12	3	4	10	B80808060
8	80	12	3	4	10	B80808080
8	100	12	3	4	10	B80808100
10	60	14	4	4	12	B80810060
10	80	14	4	4	12	B80810080
10	100	14	4	4	12	B80810100
12	80	16	4	4	16	B80812080
12	100	16	4	4	16	B80812100
12	125	16	4	4	16	B80812125
16	80	20	6	6	20	B80816080
16	100	20	6	6	20	B80816100
16	125	20	6	6	20	B80816125
16	160	20	6	6	20	B80816160
16	200	20	6	6	20	B80816200
20	100	24	6	6	22	B80820100
20	125	24	6	6	22	B80820125
20	160	24	6	6	22	B80820160
20	200	24	6	6	22	B80820200
20	250	24	6	6	22	B80820250
25	125	30	6	6	25	B80825125
25	160	30	6	6	25	B80825160
25	200	30	6	6	25	B80825200
25	250	30	6	6	25	B80825250
25	315	30	6	6	25	B80825315
32	125	37	8	8	35	B80832125
32	160	37	8	8	35	B80832160
32	200	37	8	8	35	B80832200
32	250	37	8	8	35	B80832250
32	315	37	8	8	35	B80832315
40	125	45	8	8	35	B80840125
40	200	45	8	8	35	B80840200
40	250	45	8	8	35	B80840250
40	315	45	8	8	35	B80840315
40	400	45	8	8	35	B80840400
50	315	55	10	10	45	B80850315
50	400	55	10	10	45	B80850400
60	315	65	10	10	55	B80860315
60	400	65	10	10	55	B80860400
	400		Ctool 5			B80860400

Materials: Steel 5732 Hardness: 62-64 HRc.


BUSH REF. 812

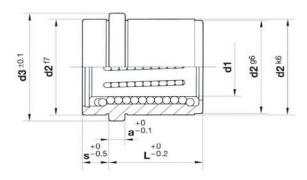

	BOLEXP 812													
d1	L	d2	d3	а	S	Ø ball	Number of lines	Item c ode						
12	20	22	26	6	6	2,5	6	B8121226						
18	24	30	35	6	11	3	6	B8121835						
24	29	38	43	6	16	3	8	B8122445						
30	34	46	52	6	21	4	8	B8123055						

Materials: Special steel bush. Bronze cage with high resistance to wear. High-precision balls. Hardness: 60-62 HRc.

COLUMN REF. 818

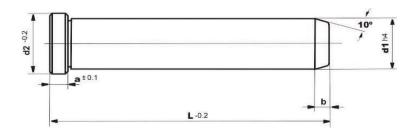

	BOLEXP 818												
d1	L	d2	а	b	Item code								
12	80	16	4	4	B81812080								
12	100	16	4	4	B81812100								
12	120	16	4	4	B81812120								
12	140	16	4	4	B81812140								
18	100	22	6	7	B81818100								
18	120	22	6	7	B81818120								
18	140	22	6	7	B81818140								
18	160	22	6	7	B81818160								
18	200	22	6	7	B81818200								
24	160	28	6	7	B81824160								
24	200	28	6	7	B81824200								
24	240	28	6	7	B81824240								
24	300	28	6	7	B81824300								
30	160	36	6	7	B81830160								
30	200	36	6	7	B81830200								
30	240	36	6	7	B81830240								
30	300	36	6	7	B81830300								

Materials: Steel 5732. Hardness: 62-64 HRc.

COLUMN REF. 828




		E	BOLE	XP 8	28	
d1	L	d2	а	b	С	Item Code
12	80	16	4	4	17	B82812080
12	100	16	4	4	17	B82812100
12	120	16	4	4	17	B82812120
12	140	16	4	4	17	B82812140
18	100	22	6	7	22	B82818100
18	120	22	6	7	22	B82818120
18	140	22	6	7	22	B82818140
18	160	22	6	7	22	B82818160
18	200	22	6	7	22	B82818200
24	160	28	6	7	27	B82824160
24	200	28	6	7	27	B82824200
24	240	28	6	7	27	B82824240
24	300	28	6	7	27	B82824300
30	160	36	6	7	36	B82830160
30	200	36	6	7	36	B82830200
30	240	36	6	7	36	B82830240
30	300	36	6	7	36	B82830300

Materials: Steel 5732. Hardness: 62-64 HRc.

BALL GUIDED EJECTION BUSHINGS


INCH SIZES

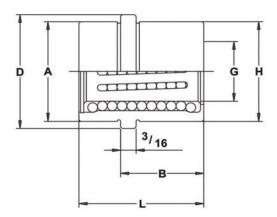

	BOLEXP INCH SIZES											
NOM. I.D.	G	+.0005 0000	+.000 001	+.000 030	+.000	+.000 030	CATALOG NUMBER					
3/4	0.751	1.2505	1.2490	1.427	1.50	1.00	BGEB0750					
7/8	0.876	1.3755	1.3740	1.552	1.75	1.12	BGEB0875					
1"	1.001	1.6255	1.6240	1.802	1.75	1.12	BGEB1000					
1-1/4	1.251	2.0005	1.9990	2.177	1.75	1.12	BGEB1250					
1-1/2	1.501	2.5005	2.4990	2.687	2.25	1.62	BGEB1500					

Materials: Special steel bush. Bronze cage with high resistance to wear. High-precision balls. Hardness: 60-62 HRc.


BUSH REF. 844

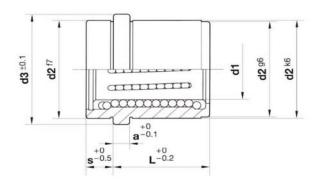

	BOLEXP 844													
d1	٦	d2	d3	а	s	Ø ball	Number of lines	Item code						
10	12	17	20	6	9	2	6	B844100912						
10	17	17	20	6	9	2	6	B844100917						
12	17	22	25	6	9	2,5	6	B844120917						
12	17	22	25	6	12	2,5	6	B844121217						
18	22	30	33	6	12	3	6	B844181222						
18	22	30	33	6	17	3	6	B844181722						
24	27	38	41	6	17	3	8	B844241727						
24	27	38	41	6	22	3	8	B844242227						
30	32	46	49	6	22	4	8	B844302232						
30	36	46	49	6	27	4	8	B844302736						

Materials: Special steel bush. Bronze cage with high resistance to wear. High-precision balls. Hardness: 60-62 HRc.

BUSH REF. 845

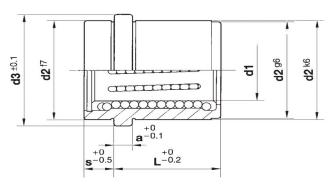


36

	BOLEXP 845												
d1	٦	d2	d3	a	s	Ø ball	Number of lines	Item Code					
24	17	38	41	6	12	3	8	B8452417					
24	22	38	41	6	17	3	8	B8452422					
36	22	54	58	6	17	4	8	B8453622					
36	27	54	58	6	22	4	8	B8453627					
48	27	68	73	6	22	4	10	B8454827					
48	36	68	73	6	27	4	10	B8454836					

Materials: Special steel bush. Bronze cage with high resistance to wear. High-precision balls. Hardness: 60-62 HRc.

BUSH REF. 852 (stainless steel)

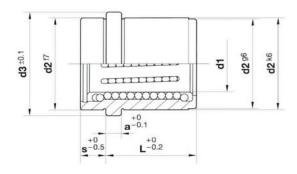


	BOLEXP 852													
d1	d1 L d2 d3 a s Ø Number of lines Item code													
12	22	24	28	6	8	3	5	B8521222						
16	22	28	32	6	8	3	6	B8521622						
20	26	32	36	6	9	3	6	B8522026						
25	26	40	45	6	9	3	8	B8522526						

Materials: Stainless steel bush 1.2083.

Anodized aluminium cage
High-precision balls stainless steel,

Hardness: 54-56 HRc.

COLUMN REF. 858 (stainless steel)

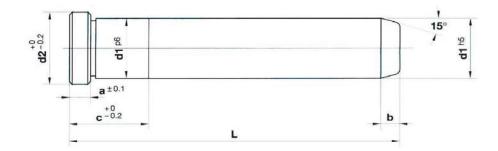

			BOL	.EXP	858	
d1	L	d2	а	b	C	Item code
12	80	16	4	4	16	B85812080
12	100	16	4	4	16	B85812100
16	100	20	6	6	20	B85816100
16	125	20	6	6	20	B85816125
20	125	24	6	6	22	B85820125
20	160	24	6	6	22	B85820160
25	160	30	6	6	25	B85825160
25	200	30	6	6	25	B85825200

Materials: 1.4125 Hardness: 58-60 HRc.



MODIFIED **ROLLING CHANNELS**

- · With inclination
- · With channel grouping



INNER RECIRCULATION WITH SOLID LUBRICANTS

- Emergency lubricant
 Manufactures for use with solid lubricants

Graphite + Molybdenum disulfide



Continuously greasing balls

DOUBLE CONTACT **CHANNELS**

A new distribution for a bigger load work Up to +25% of load allowed







GREASE RETAINERS

- Two grease retainers included in the ends
- Made of 190°C resistant material
- · Prevents inner lubricant from being lost





WORKING TEMPERATURE

-5° up to 190°C

MANUFACTURING DIAMETERS

Model B737: Ø12, Ø18, Ø24, Ø30 and Ø40

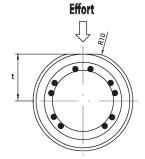

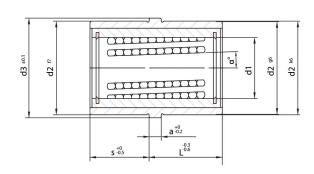


	BOLEXP 737												
d1	L	d2	d3	а	s	t	Ø ball	Number of lines	Item code				
12	17	22	25	6	12	11,25	2,5	6	B737121217				
18	22	30	33	6	17	15,25	3	6	B737181722				
24	27	38	41	6	22	19,25	3	8	B737242227				
30	36	46	49	6	27	23,25	4	8	B737302736				
40	46	60	66	8	27	30,25	4	10	B737402746				

Special steel bush. Bronze cage with high resistance to wear. Materials:


High-precision balls. Hardness: 60-62 HRc. Solid Lubricants

CLAMP

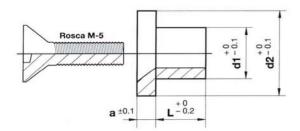

		C	LAM	IP
L	а	d1	d2	Item code
6	3	9	13	B6
8	3	9	15	B8

Materials: Special steel. Hardness: 60 HRc.

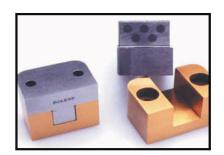


MOULD CENTERERS

All our range of centerers that we present in this catalogue edition include graphite insertions in order to self-lubricate its working in one of the pieces, the other one being coated with a TiN treatment at 2300 Hv for reducing seizing.

Side centerers make it possible to guarantee the appropriate alignment for the main plates in the mould.

The fact of making the allocations in the mould bearer axis allows us to ensure the zero point of the whole structure.

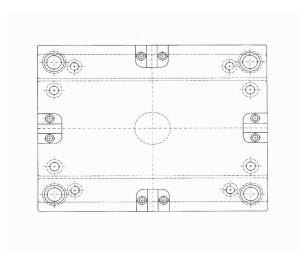


The fact of making the allocations in the mould bearer axis allows us to ensure the zero point of the whole structure.

The flat centerer keeps the axis invariable where it is located as well as absorves the +B27 longitudinal dilatations of that axis.


The system of fixing to plate of our centerers allows to make all the mechanization of plates, figure allocations and centering system in a single operation, which guarantees a greater precision of execution.

CENTERER REF. 503018

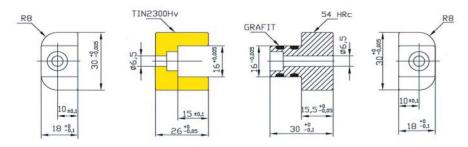


Materials: Steel 1.2344 at 54HRc. + graphite and TiN 2300Hv.

CENTERER REF. 503038

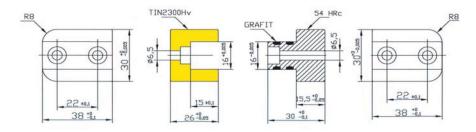

Materials: Steel 1.2344 at 54 HRc. + graphite and TiN 2300 Hv.


CENTERER REF. 505

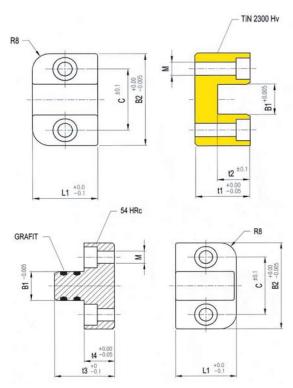

	BOLEXP REF. 505													
B1	B1 B2 L1 C t1 t2 t3 t4 M Item code													
11	11 35 26 23 25 15 29,5 15 M5 CL505035													
15	45	30	30	25	15	29,5	15	M6	CL505045					
20	20 55 36 37,5 30 20 39,5 20 M8 CL505055													
30	75	36	52	35	25	44,5	20	M10	CL505075					

Materials: Steel 1.2344 at 54 HRc. + graphite and TiN 2300 Hv.

CENTERER REF. 508

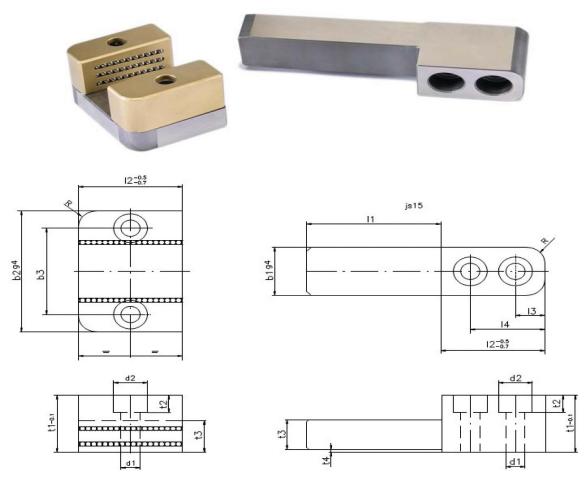

- Minimal friction with better adjustament
- Great agility of motion
- Endless travel with re-circulating balls

					BOL	EXP	REF.	508						
b1	b2	b3	11	12	13	14	d1	d2	t1	t2	t3	t4	R	Item code
12	45	29	25 50	27	7	20	6,3	11	22	6,8	14	1	6	CL508045025 CL508045050
17	50	35	32 63	36	10	26	6,3	11	25	6,8	15	1	8	CL508050032 CL508050063
25	63	45	40 80	46	13	33	8,5	15	32	9	20	1	8	CL508063040 CL508063080
35	85	60	50 100	56	16	41	10,5	18	36	11	24	1	10	CL508085050 CL508085100
45	100	74	56 112	66	19	48	13	20	40	13	25	1	10	CL508100056 CL508100112


Materials: 1.2379 Hardness 60-62 HRc.



INCLINED ASSEMBLY

During the years of experience in the injection mould sector mechanizations, we have detected the need of products which are able to agilize its mechanization; because of this fact, and given the complexity of making the tilted columns in moulds, we have decided to manufacture these tilted assemblies.

Our standard system allows us to have in stock and ready for immediate delivery an amount of 140 models, with which we expect to greatly cover the existing needs.

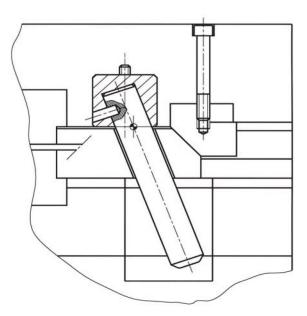


The assembly consists of a support in 1.2312 material screwed into the allocation previously made in the mould plate with 2 conical screws fixing and aligning the position of the tilted colum out of the support.

Mounting and unmounting operations are made through the front side of the plate, which makes it easy to exchange, when needed. The allocations to make on plates are always straight, so improving its mechanization agility.

By using the BOLEXP tilted assembly, we keep free the down side of the plate through which we can make cooling circuits without interferences.

INCLINED ASSEMBLY REF. CI

7° - 10° - 12° - 15° - 18° - 20° - 22°

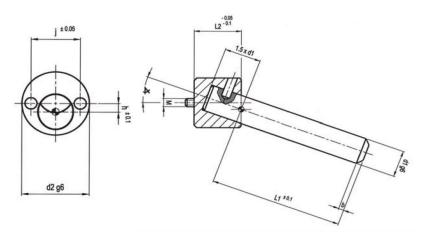

ALL OF THE BENCH MARKS IN THE DIMENSION TABLE ARE VALID FOR ANY OF THE AVAILABLE DEGREES: 7°, 10°, 12°, 15°, 18°, 20° AND 22°


				IN	CLII	NEC) AS	SSE	MBL	_Y C	i I			
41	d2	L2		h	b	М				- 1	_1			
uı	uz	LZ	J	- 11	D	M	50	75	100	125	150	175	200	250
12	24	22	17,5	2,5	4	4								
16	30	28	22,5	3	6	5								
20	38	36	28	4	6	6								
25	48	45	36	5	6	8								
30	58	55	43	6	8	10								

Way of order: CI + Angle + Ø Column + Column Length L1

Materials: Base support 1.2312, Column 1.5732 58-60 HRc, Screw 12-9

TILTED COLUMN SUPPORT

7° - 10° - 12° - 15° - 18° - 20° - 22°

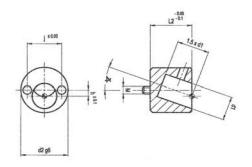


	CS	SU	PPO	RT	
d1	d2	L2	j	h	M
12	24	22	17,5	2,5	4
16	30	28	22,5	3	5
20	38	36	28	4	6
25	48	45	36	5	8
30	58	55	43	6	10

ALL OF THE BENCHMARKS IN THE DIMENSION TABLE ARE VALID FOR ANY OF THE AVAILABLE DEGREES: 7°, 10°, 12°, 15°, 18°, 20° Y 22°

Way of order: CS + Angle + Ø Column

Materials: Base support 1.2312, Column 1.5732 58-60 HRc, Screw 12-9

TILTED COLUMN CP

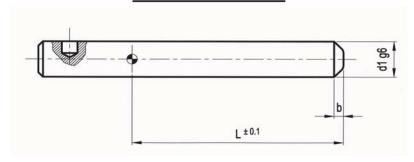

		TI	LTE	D C	DLUI	MN C	P							
ald	d1 b L1													
u i	D	50	75	100	125	150	175	200	250					
12	4													
16	6													
20	6							_						
25	6													
30	8													

Way of order: CP + Ø Column + Length column L1

Materials: 1,5732 58-60 HRc



SELF-LUBRICATED BRONZE

The development of self-lubricated guidance systems arises from the need to solve the existing problems involved in lubrication. These are due either to the difficulty of access or to the convenience of continuous and permanent lubrication, which oils fail to ensure.

Implementing these systems results in a significant reduction in seizing problems and maintenance costs, as well as in gas emission caused by oil heating. This permits to operate at high temperatures that in some cases can reach 400° C (752° F).


The presence of aluminium in bronze reduces the attack of atmospheric agents and warm gases, whilst at the same time exhibiting great stability against distilled water, saline water, seawater or acid well water. Bleaches, except for ammonia, are harmless to it. Moreover, a protection layer produced by the material itself acts very favourably against the corrosive effect of sulphur and oxydizing gases.

Graphite insertions, acting as a solid lubricant, allow to keep an excellent level of lubrication for plates or bushes through all their lifetime, ready for use at any time. Through use, the bronze structure wear causes graphite insertions wear. The graphite dust resulting from this slight wear will be the responsible for lubricating the whole of the contact area.

The graphite used is a material with an extremely low chemical-inertia level, not interacting with most elements in nature under normal conditions. This ensures regular behaviour through the piece lifetime without unexpected contingency.

BOLEXP item construction exhibits a graphite distribution over the guide surface of about 25%-35% of the total, thus guaranteeing proper lubrication of the tool to construct. In addition, the graphite insertions used are relatively small, in comparison with other manufacturers, in order to minimize the impact on bronze bush consistency and maximize the dispersal of solid lubricant.


BUSH REF. 311

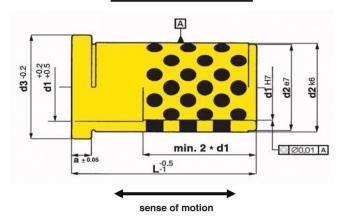

						В	OLE	EXP	31 1							
d1	d2	d3	•								L					
uı	uz	us	а	12	17	22	27	36	46	56	66	76	86	96	116	136
9	14	16	3													
10	14	16	3													
12	18	23	6													
14	20	25	6													
15	20	25	6													
16	22	27	6													
18	26	31	6													
20	26	31	6													
22	30	35	6													
24	30	35	6													
30	42	47	6													
32	42	47	6													
40	54	60	10													
42	54	60	10													

Materials: Bronze EN1982 CuAl10Fe5Ni5C + Graphite

BUSH REF. 312

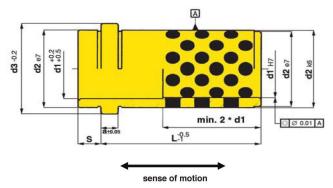


	BOLEXP 312																	
d1	d2	d3	S	а	17	22	27	36	46	56	66	76	86	96	116	136	156	196
9	14	16	5	3														
10	14	16	5	3														
14	20	25	6	6				0	0	0	0	0						
15	20	25	6	6														
18	26	31	8	6						0								
20	26	31	8	6														
22	30	35	8	6														
24	30	35	8	6														
30	42	47	8	6														
32	42	47	8	6														
40	54	60	10	10														
42	54	60	10	10														

Form of order: G312 + d1 + L

Materials: Bronze EN1982 CuAl10Fe5Ni5C + Graphite


BUSH REF. 313

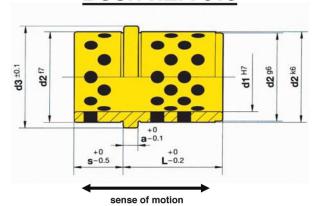

	BOLEXP 313												
d1	L	d2	d3	а	S	Item code							
14	17	20	25	6	9	G3131417							
15	17	20	25	6	9	G3131517							
18	22	26	31	6	17	G3131822							
20	22	26	31	6	17	G3132022							
22	27	30	35	6	22	G3132227							
24	27	30	35	6	22	G3132427							
30	36	42	47	6	27	G3133036							
32	36	42	47	6	27	G3133236							

Materials: Bronze EN1982 CuAl10Fe5Ni5C + Graphite


BUSH REF. 401

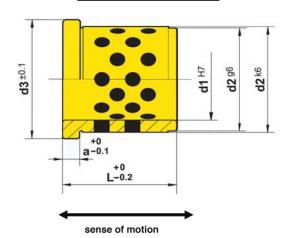

BOLEXP 401									
d1	L	d2	d3	а	Item code				
20	26	28	32	6	G4012026				
20	35	28	32	6	G4012035				
25	26	32	36	6	G4012526				
25	35	32	36	6	G4012535				
25	45	32	36	6	G4012545				
32	35	40	45	8	G4013235				
32	45	40	45	8	G4013245				
40	45	50	56	8	G4014045				

Materials: Bronze EN1982 CuAl10Fe5Ni5C + Graphite


BUSH REF. 402

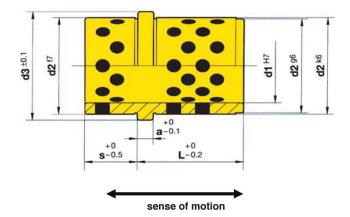

BOLEXP 402										
d1	L	d2	d3	а	S	Item code				
12	22	18	22	6	9	G4021222				
16	22	22	26	6	12	G4021622				
16	26	22	26	6	12	G4021626				
20	26	28	32	6	15	G4022026				
20	35	28	32	6	15	G4022035				
25	26	32	36	6	18	G4022526				
25	35	32	36	6	18	G4022535				
25	45	32	36	6	18	G4022545				
32	35	40	45	8	20	G4023235				
32	45	40	45	8	20	G4023245				
40	45	50	56	8	25	G4024045				
40	63	50	56	8	25	G4024063				

Materials: Bronze EN1982 CuAl10Fe5Ni5C + Graphite


BUSH REF. 403

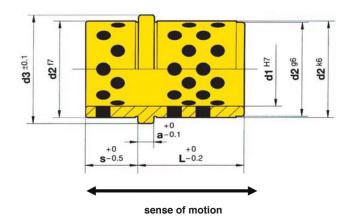

BOLEXP 403 S D1 D2 **D3** L+S L a Item code G4031232 G4031432 G4031632 G4031832 G4032032 G4032532 G4033250 G4034065

Materials: Bronze EN1982 CuAl10Fe5Ni5C + Graphite


BUSH REF. 404

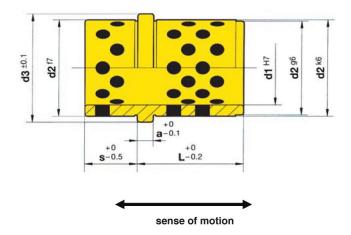

BOLEXP 404									
d1	L	d2	d3	а	S	Item code			
12	17	16	20	4	8	G4041217			
16	17	20	24	4	12	G4041617			
16	21	20	24	4	12	G4041621			
18	21	25	30	6	17	G4041821			
18	26	25	30	6	17	G4041826			
20	26	30	35	6	17	G4042026			
22	21	30	35	6	17	G4042221			
22	26	30	35	6	17	G4042226			
25	26	35	40	8	18	G4042526			
25	35	35	40	8	18	G4042535			
30	35	40	45	8	21	G4043035			

Materials: Bronze EN1982 CuAl10Fe5Ni5C + Graphite


GUIDE STRIP REF. 405

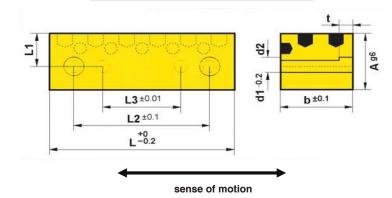

BOLEXP 405									
A	b	L	L1	L2	L3	d1	d2	t	Item code
20	15	63	13	47	25	6	6,5	6,5	G40515063
20	15	300							G40515300
20	20	63	13	47	25	6	6,5	6,5	G40520063
20	20	80	13	64	40	6	6,5	6,5	G40520080
20	20	100	13	84	60	6	6,5	6,5	G40520100
20	20	300							G40520300
25	25	100	16	80	50	8	8,5	8,5	G40525100
25	25	125	16	105	75	8	8,5	8,5	G40525125
25	25	300							G40525300
25	30	125	16	105	75	8	8,5	8,5	G40530125
25	30	160	16	140	110	8	8,5	8,5	G40530160
25	30	300							G40530300

Materials: Bronze EN1982 CuAl10Fe5Ni5C + Graphite


GUIDE STRIP REF. 406

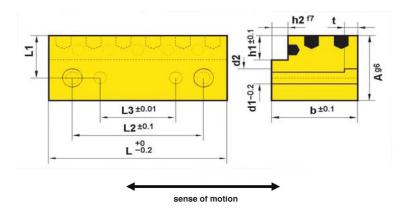

BOLEXP 406											
Α	b	L	L1	L2	L3	d1	d2	t	h1	h2	Item code
20	20	63	13	47	25	6	6,5	6,5	6	5	G40620063
20	25	63	13	47	25	6	6,5	6,5	6	5	G40625063
20	25	80	13	64	40	6	6,5	6,5	6	5	G40625080
20	25	100	13	84	60	6	6,5	6,5	6	5	G40625100
25	31	100	16	80	50	8	8,5	8,5	7	6	G40631100
25	31	125	16	105	75	8	8,5	8,5	7	6	G40631125
25	38	125	16	105	75	8	8,5	8,5	7	8	G40638125
25	38	160	16	140	110	8	8,5	8,5	7	8	G40638160

Materials: Bronze EN1982 CuAl10Fe5Ni5C + Graphite

SLID PLATE REF. 407

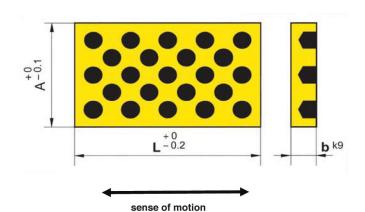

BOLEXP 407							
A	П	b	Item code				
20	63	5	G40720063				
20	300	6	G40720300				
25	63	5	G40725063				
25	80	5	G40725080				
25	300	6	G40725300				
30	80	6	G40730080				
30	100	6	G40730100				
30	300	6	G40730300				
40	80	6	G40740080				
40	100	6	G40740100				
40	125	6	G40740125				
40	300	6	G40740300				

Materials: Bronze EN1982 CuAl10Fe5Ni5C + Graphite



BOLEXP NORMALIZADOS, S.L.U.

Calle Barcelona 45 · E-08120 LA LLAGOSTA - Spain

Telf: +34 93 560 70 11 • Fax: +34 93 574 10 39

www.bolexp.com · E-Mail: bolexp@bolexp.com

BOLEXP NORMALIZADOS, S.L.U. RESERVES THE RIGHT TO MAKE ANY MODIFICATION, WHETHER TOTAL OR PARTIAL, WITHOUT PRIOR NOTICE

DISTRIBUTED BY:		